


1.

Firstly, put the main frame on it's side, and with the larger bolts provided, secure the feet to the bottom. The bottom of the frame is the end that has the large metal threaded holes.

With the stand now upright, install the bottom base to the stand, bearing in mind the height you would like the viewing angle to be.

The bottom base is indentified by it's holes, that **DO NOT** go right the way through! Which should also be facing upwards when installed correctly!

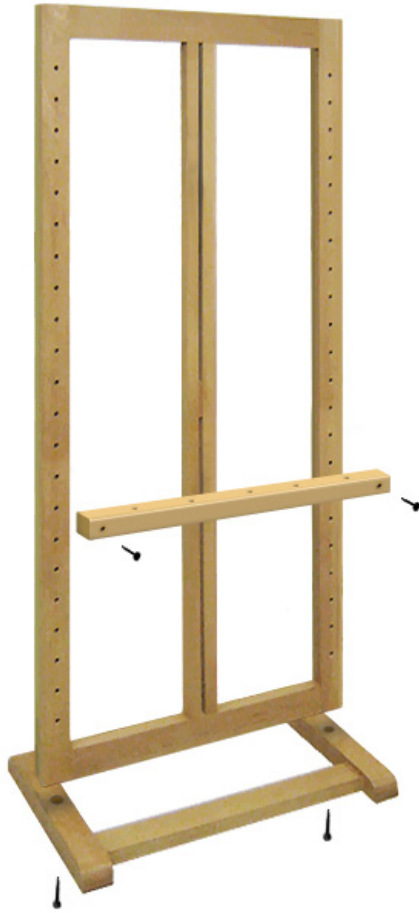


2.

Using one of the panels as a guide, workout the point at which the top base will have to be installed.

The easiest way is to count how many holes there are between the bottom base and the top of the panel.

Then simply bolt the top base as you did the bottom.

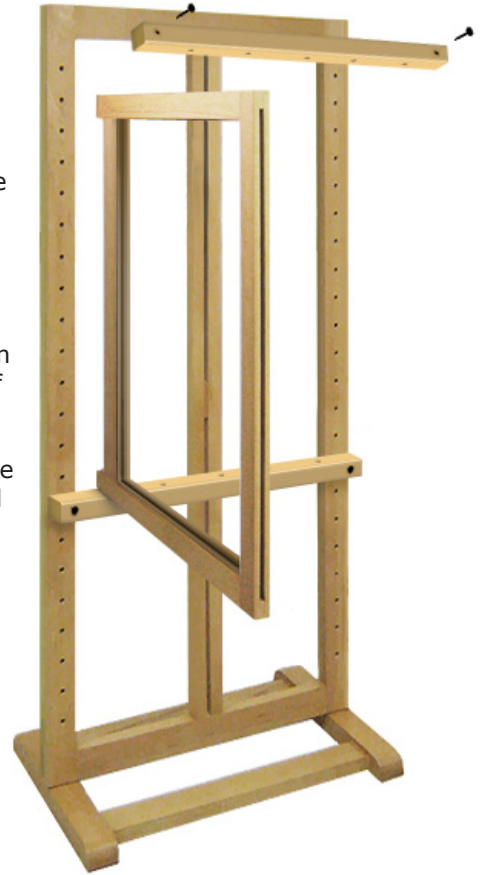

3.

With the 2 parts of the base bolted in position, place a panel between them, and align it with the holes in the top and bottom.

Now insert a 6mm wooden rod through the hole in the top base, until it sits inside the bottom base.

Do this same step with all the remaining panels.



4.



Finally slide your poster sleeves into the panels. To insert your poster/print, the sleeve must be removed from the panel! **Poster/prints display inside the sleeves.**