


First decide on the height you would like the finished browser to be, then mark the positions of the holes on the bottom base piece.

The bottom base piece is identified by it's holes, that **DO NOT** go right the way through! And these holes should be facing upwards!




Using one of the panels as a guide, measure the approximate height & position that the top piece of the base must be installed.

Holding this into position, mark the positions of the holes as you did for the bottom piece.

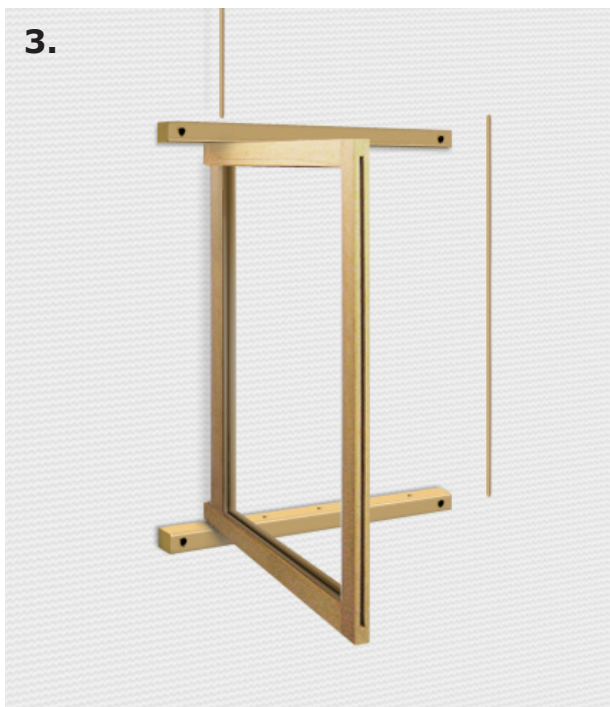

With the 2 base pieces installed, place one of the panels between them, and align it with the base pieces holes.

Now with the panel aligned into position, insert a 6mm rod through the hole in the top base, until it sits inside the bottom base. Do this for all of the remaining panels.

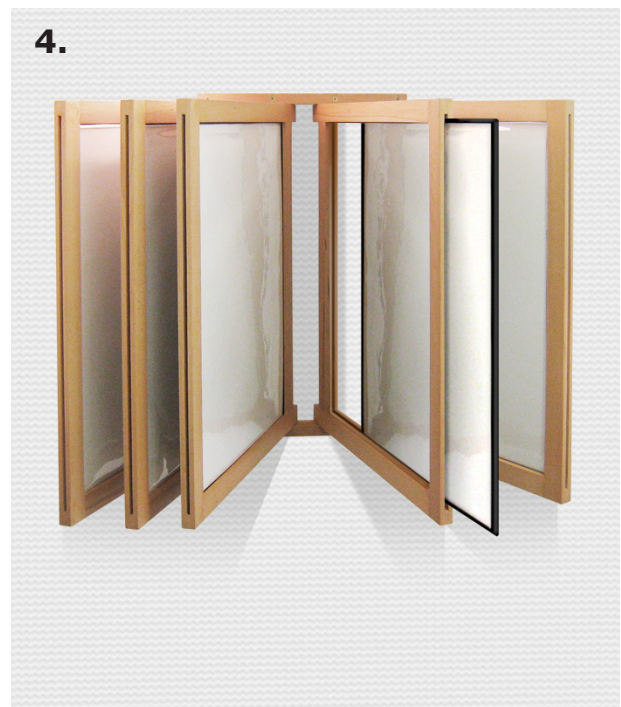

Finally slide your poster sleeves into the panels. To insert a poster/print, the sleeve must be removed from the panel first! **Poster/prints display inside the sleeves!**